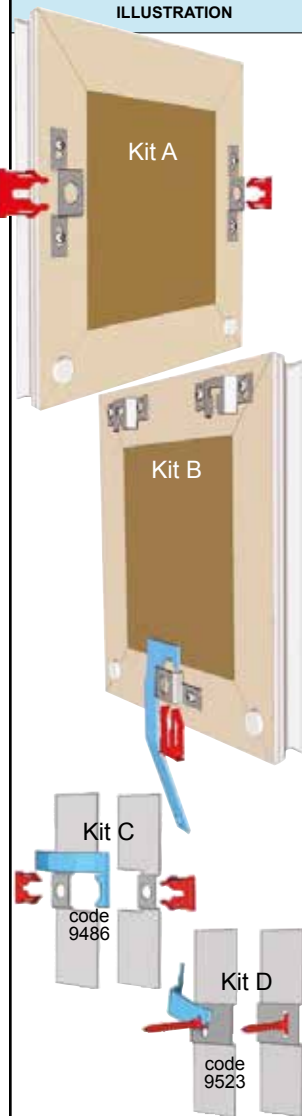





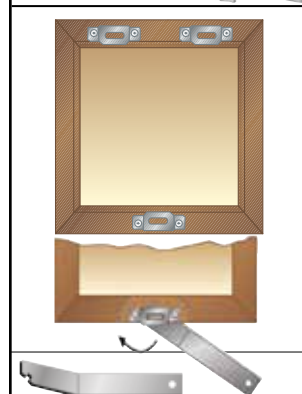









ILLUSTRATION	DESCRIPTION		PACKING	€ per pack.	Discounts Q.ty %	CODE		
	"Spring Lock" security hanging system		Kit for 1 frame	3,00	10 30 100 10% 20% 25%	SL		
	Kit A includes: <ul style="list-style-type: none">• A couple of bridges• A couple of locks• Four screws to fix the bridges to the frame To install the SpringLock system to the frame to have to follow these steps: 1) Fit the two bridges to the frame using the screws. 2) On the wall fit two screws in corresponding positions. The kit does not include these screws (for screw see page 33). 3) Frame is offered up and the bridges fitted over the screws in the wall. 4) Locks are pushed home with thumb pressure.		Kit for 25 frames	45,00	5 20 50 5% 10% 13%	SLF		
			Kit for 100 frames	165,00		SLC		
	Kit B is to be used when hanging frames closely side by side. It includes: <ul style="list-style-type: none">• A couple of Hang Plates to fit at the top of the frame• One bridge to fit on the bottom of the frame.• Six screws• One SpringLock The steps to follow for the kit B are similar to the steps for the kit A.		Kit for 1 frame	2,40	4 20 50 100 10% 15% 20% 24%	3943		
	Kit C Self-adhesive plate system with SpringLock The kit includes: 2 self-adhesive plates, 2 SpringLock Instructions: 1) Fit the 2 self-adhesive plates on the frame 2) On the wall fit the 2 screws in corresponding position 3) Fit the frame on the wall so that the screw head enters into the plate 4) Apply the SpringLock by pushing it with your hand. To unlock the frame you need the special tool SL1. Maximum frame weight 4 Kg.			3,40	5 10%	9486		
	Kit D Self-adhesive plate system with "T"-screws The kit includes: 2 self-adhesive plates, 2 "T"-screws, 2 wall plugs for screws Instructions: 1) Fit the 2 self-adhesive plates on the frame 2) On the wall fit the 2 screws in corresponding position 3) Fit the frame on the wall so that the screw head enters into the plate 4) With the special tool (AS9) turn the head of the screw. To unlock the frame you need the special tool AS9. Maximum frame weight 4 Kg.			3,00	5 10%	9523		
	Single items can be ordered apart :							
	 Bridges for the kit A with springs and screws		50 pieces	39,00	5 10%	4647		
	 Plates for security hangers for the kit B with screws		10 pieces 50 pieces	5,10 21,50	5 10% 5 10%	4648T 4648		
	To remove the frame you need the release tool that is available in two versions:							
 SL1 <ul style="list-style-type: none">• Release tool with hanging hole			3,60	4 10 30 10% 15% 20%	SL1			
 5693 <ul style="list-style-type: none">• Marker Button. Fits into bridge to mark wall for screw.			1,40	4 10 10% 15%	5693			
 7165 <ul style="list-style-type: none">• Release tool with integral marker to mark wall screw.			5,10	4 10 10% 15%	7165			
	Security Hanging System "AS". It works as follows: 1) Apply 2 horizontal grooved metal plates onto the top of the frame. A third one is placed along the bottom back of the frame. 2) Insert 3 special T-screws into the wall at the same distance of the plates. 3) The frame with the 3 metal plates is fitted over the screws. 4) Tighten the screws by using the special spanner (AS9) until they are vertically positioned. Now the frame is firmly secured and the frame can be removed only by the spanner.		Kit for 1 frame: <ul style="list-style-type: none">- 3 plates- 6 screws to fix the plates- 3 T-screws and wall plugs	3,00	5 10 5% 10%	AS		
			Kit for 10 frames: <ul style="list-style-type: none">- 30 plates- 60 screws to fix the plates- 30 T-screws with wall plug	12,00	5 10 5% 10%	AS10		
	Security Hanging System "ASW". It uses 2 brackets (code AS3) instead of 2 T-screws. The rest of the procedure is the same as described above.		Kit for 1 frame: <ul style="list-style-type: none">- 3 plates- 6 screws to fix the plates- 2 brackets- 2 screws with wall plugs- 1 T-screw with wall plug	2,60	5 10 10% 15%	ASW		
	Special spanner for T-screws (has to be ordered apart)		1 piece	1,90	5 10%	AS9		
	Single items can be ordered apart:	 Plates to be fixed to the back of frames		pack 100 pces pack 1000 pces	10,50 90,00	3 8% 3 8%	AS1C AS1	
		 Screws for fixing the plates to frames. Length 13 mm. Diameter 2,9 mm		pack 100 pces	3,10	3 10 8% 15%	AS8C	
		 Brackets		pack 100 pces pack 1000 pces	9,30 112,00	3 8% 3 8%	AS3C AS3	
		 T-screws. Length 39 mm. Diameter 6 mm.		pack 100 pces pack 1000 pces	17,50 132,00	3 8% 3 8%	AS4C AS4	
		 Wall plugs for screws		for brackets screws (diam. 6) for T-screws (diam. 8)	pack 100 pces pack 100 pces	3,20 2,50	3 8% 3 8%	AS7C AS5C
		 Screws for fixing brackets. Length 38 mm. Diameter 3.3 mm.		pack 100 pces	4,90	3 8%	AS6C	
 mm 28	Safety hook. Its function is to make it difficult to detach the frame from the hook. The secret to removing the frame is to properly tilt the picture. It bears a maximum weight of about 15 Kg. The screw and the plug must be ordered separately.		pack 20 hooks pack 100 hooks	10,00 46,00	5 10% 5 10%	9487V 9487B		
	Screw and plug to fix the safety hook (code 9487B) to the wall.		pack 100 screws + 100 wall plugs	7,50	5 10%	9559		
	Pack of 20 safety hooks plus the screw and the relative plug to fix the hook to the wall.		pack 20 hooks + 20 screws + 20 plugs	12,50	5 10%	9487A		